

IPC-TM-650

Руководство по проведению испытаний

Номер 2.3.33	
Тема Наличие галогенидов во флюсе, метод с применением хромата серебра	
Дата 06/04	Редакция D
Исходящая рабочая группа Рабочая группа по паяльной пасте (5-24b)	

1.0 Общее Метод качественного испытания разработан для определения хлоридов и бромидов в паяльном флюсе путем визуальной проверки после помещения на индикаторную бумагу.

2.0 Применяемые документы

IPC J-STD-004 Требования к паяльным флюсам

3.0 Испытательный образец Как минимум 10 мл жидкого флюса, типичная емкость с паяльной пастой, переплавленным пастообразным флюсом, экстрагированным флюсом для навесков дозированного припоя или экстрагированным флюсом из проволочного припоя. Процесс оплавления / экстракции должен быть выполнен в соответствии с J-STD-004.

4.0 Инструментарий / реагенты

4.1 Шесть листов индикаторной бумаги с покрытием из хромата серебра 51мм x 51мм [2дюйма x 2 дюйма]

4.2 Реактив марки «чистый»: 250мл 2-пропанол

4.3 Шесть предметных стекол

4.4 Лопаточка

5.0 Процедура

5.1 Подготовка

5.1.1 Индикаторная бумага с хроматом серебра светочувствительна. Ее необходимо хранить в закрытом контейнере и не допускать попадания света. Выносить на свет только при проведении испытаний.

5.1.2 Для предупреждения загрязнения бумаги необходимо использовать пинцет и не касаться голыми руками.

5.2 Испытание жидкого флюса или раствора экстрагированного флюса

5.2.1 Поместите каплю (примерно 0.05мл) испытываемого флюса или экстракта на листки индикаторной бумаги с покрытием их хромата серебра минимум на 15 секунд.

5.2.2 Через 15 сек погрузите каждый листок индикаторной бумаги в чистый 2-пропанол для удаления органических загрязнений.

5.2.3 Дать индикаторной бумаге высохнуть и изучить ее на предмет изменения цвета.

5.3 Испытание пастообразного флюса или пастообразного припоя с флюсом, полученного от поставщика

5.3.1 Очистить шесть предметных стекол 2-пропанолом и высушить сжатым воздухом.

5.3.2 Смочить каждый листок индикаторной бумаги с покрытием из хромата серебра деминерализированной водой.

5.3.3 Положить смоченную бумагу на каждое стекло. Удалить излишки воды промокательной бумагой.

5.3.4 Лопаточкой нанести тонкий слой пастообразного флюса или паяльной пасты на смоченную индикаторную бумагу.

5.3.5 Оставить пастообразный флюс или паяльную пасту в контакте с индикаторной бумагой на 15 сек. Затем удалить флюс 2-пропанолом или другим растворителем не повреждая бумагу.

5.3.6 Дать каждому листку индикаторной бумаги высохнуть и изучить на предмет изменения цвета.

5.4 Оценка Тщательно изучить каждый лист на изменение цвета. Изменение цвета до грязно-белого, желтоватого, кремового говорит о наличии хлоридов и бромидов (см рис.1)

5.4.1 Загрязняющие примеси Ряд реактивов кроме свободных галогенидов может привести к неудаче при испытаниях (например, амины, цианиды, изоцианаты и др.)

5.4.2 Некоторые кислые растворы могут вступить в реакцию с индикаторной бумагой и вызвать изменение цвета, аналогичное тому, которое возникает при реакции с хлоридами и бромидами. Если наблюдается изменение цвета, рекомендуется проверить кислотность поврежденной зоны с помощью индикаторной бумаги. Если pH меньше 3, то наличие хлоридов и бромидов необходимо проверить аналитическими методами.

5.4.3 Вероятно, что металл, присутствующий в образце паяльной пасты, может образовать белый осадок, который трудно отличить при осмотре на изменение цвета. Рекомендуется провести повторное испытание пастообразного флюса или флюса, экстрагированного из паяльной пасты.

6.0 Примечания

6.1 Безопасность Необходимо соблюдать все меры безопасности MSDS что касается реактивов, используемых при данном испытании.

Рисунок 1 Результаты испытаний на наличие хлоридов / бромидов – см в оригинале на стр 2.



ASSOCIATION CONNECTING
ELECTRONICS INDUSTRIES®

2215 Sanders Road
Northbrook, IL 60062-6135

IPC-TM-650 TEST METHODS MANUAL

1 Scope This qualitative test method is designed to determine the presence of chlorides and bromides in soldering flux by visual examination after placement on test paper.

2 Applicable Documents

IPC J-STD-004 Requirements for Soldering Fluxes

3 Test Specimen A minimum of 10 ml of liquid flux, a representative container of solder paste, reflowed solder paste flux, extracted solder preform flux or extracted cored wire flux. The reflow/extraction process should be carried out in accordance with J-STD-004.

4 Apparatus and Reagents

4.1 Six pieces of silver chromate test paper 51 mm x 51 mm [2 in x 2 in].

4.2 250 ml of reagent grade 2-propanol.

4.3 Six glass microscope slides.

4.4 Spatula.

5 Procedures

5.1 Preparation

5.1.1 The silver chromate paper is extremely light sensitive and must be stored in a closed container away from light until used for testing.

5.1.2 To avoid contamination, the paper must be handled with forceps and must never be touched with bare hands.

5.2 Test for Liquid Flux or Flux Extract Solution

5.2.1 Place one drop of test flux or flux extract (approximately 0.05 ml) on each piece of silver chromate test paper. Allow the droplet to remain on each test paper for a minimum of 15 seconds.

5.2.2 After the 15 seconds, immediately immerse each test paper in clean 2-propanol to remove the residual organic materials.

Number 2.3.33	
Subject <i>Handwritten: Silver Chromate Test Paper</i> Presence of Halides in Flux, Silver Chromate Method	
Date 06/04	Revision D
Originating Task Group Flux Specifications Task Group (5-24a)	

5.2.3 Allow each test paper to dry and examine for color change.

5.3 Test for Paste Flux or Solder Paste Flux as Obtained from the Supplier

5.3.1 Clean six glass microscope slides with 2-propanol and air dry.

5.3.2 Moisten each piece of silver chromate reagent paper with deionized water.

5.3.3 Apply a wet paper to each glass slide and remove the excess water with blotting paper.

5.3.4 Using a spatula, apply a thin coating of the paste flux or solder paste directly onto each moist reagent paper.

5.3.5 Allow the paste flux or solder paste to remain in contact with the paper for 15 seconds, then remove the flux with 2-propanol or other appropriate solvent without disturbing the paper.

5.3.6 Allow each test paper to dry and examine for color change.

5.4 Evaluation Carefully examine each test sheet for possible color change. A change to off-white or yellow-white indicates the presence of chlorides or bromides (see Figure 1).

5.4.1 Interferences A number of chemicals besides free halides may cause test failures. (Representative examples are, but are not limited to, amines, cyanides, and isocyanates.)

5.4.2 Certain acidic solutions may react with the reagent paper to produce a color change similar to that obtained with chlorides and bromides. When a color change is observed, it is advisable to check the acidity of the affected area by means of a pH indicating paper. If pH values of less than 3 are obtained, the presence of chlorides and bromides should be verified by other analytical means.

5.4.3 It is possible that the metal present in a solder paste sample may leave a white residue that is difficult to distinguish

IPC-TM-650		
Number 2.3.33	Subject Presence of Halides in Flux, Silver Chromate Method	Date 06/04
Revision D		

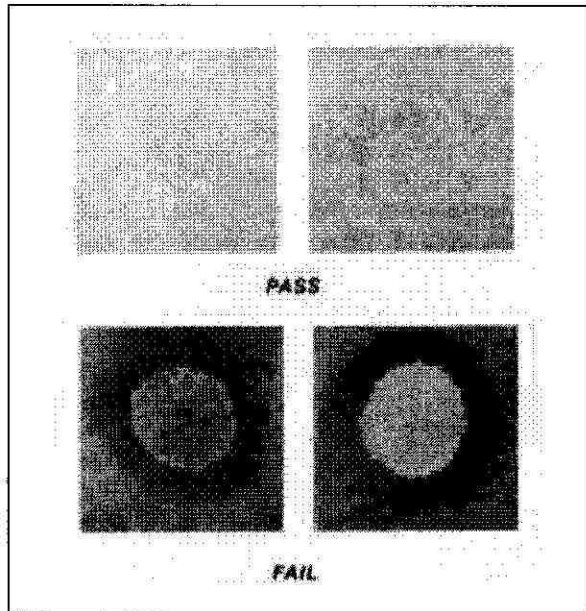


Figure 1 Chlorides and/or Bromides Test Results

from a true color change. A retest on the representative paste flux or flux extracted from the paste is advised.

6 Notes

6.1 Safety Observe all appropriate precautions on MSDS for chemicals involved in this test method.